


**Step 1:** Place SD card into the card reader adapter. Plug the adapter into USB port of computer. Open file explorer, then open the SD card.

**Step 2:** Unzip and save the .bin file onto the SD card. Be sure it is not inside of any folders.


**Step 3:** Right click the .bin file and select properties. Choose properties, then click the read-only option. The reference picture is as follows:

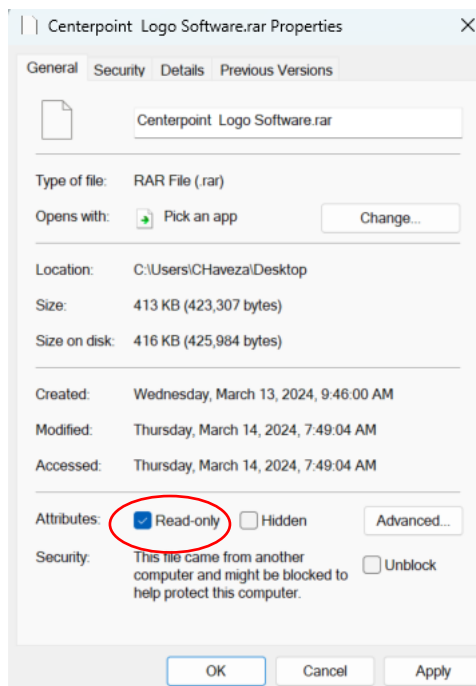

**Step 4:** Remove the SD card from the adapter and insert the SD card into the monocular card slot. Long press the power button on the monocular to turn it on.



**Step 5:** The software will automatically update. When the progress on the screen displays 100%, it means the update is complete.

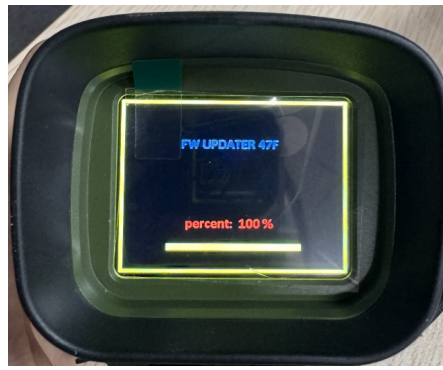

**Step 6:** Pull out the SD card and long press the power button, the boot logo will be displayed on the screen.



**Step 7:** Place SD card back into adapter in computer. Open file explorer, then open the SD card.

**Step 8:** Delete the .bin file, then remove the SD card and adapter. Re-insert the SD card into the monocular. When turning on the monocular it should no longer show the updating screen. The monocular is ready for use.